




Thanks for purchasing our product. Hope the manual can make it easier for your using.
As we are committed to continuously improve the customer experience, products may have some difference with description in the manual. In this case, subject to a real machine.

 **BRAUN®**

SIXZERO
ULTIMATE ACTION IMAGING

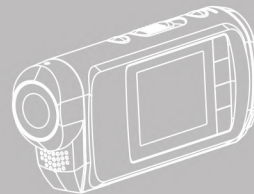

Quick Start Guide

Safety precautions


1. Please don't disassemble the camera.
2. Only authorized technical staff can made the repairings.
3. The machine temperature will rize after long time of use. It is normal status.
4. Only original battery and adapter can be used for the camera.

Contents


Chapter 1	Device surface introduction	2
Chapter 2	Buttons function introduction	4
Chapter 3	Battery install	5
Chapter 4	Charging	6
Chapter 5	Insert memory card	7
Chapter 6	Mode selection	9
Chapter 7	Photo shooting and video recording	10
Chapter 8	Playback operation	13
Chapter 9	Setting operations	13
Chapter 10	Remote controller coperation	14
Chapter 11	Mounts application	15
Chapter 12	Connect to TV	22
Chapter 13	Connect to PC	23
Chapter 14	Package list	24

Chapter 1 Device surface introduction

1. Photo key
2. Video Key
3. Power/video protection key
4. Indicator
5. Micro SD Slot
6. HDMI slot
7. Battery clip
8. External Mic
9. USB
10. Manual key
11. Up key
12. Down key
13. OK key
14. LCD Display
15. Mounts screw hole
16. Built-in microphone

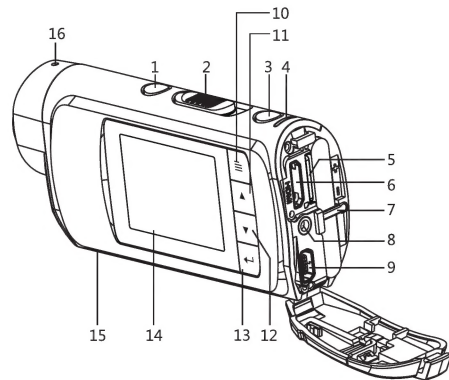

- 17. Battery cover key
- 18. MIC/USB Cover
- 19. Lens
- 20. Speaker




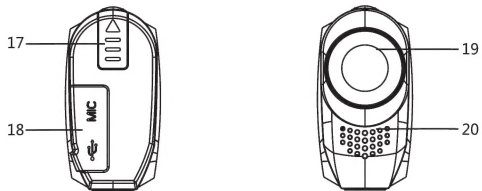


Chapter 2 Buttons function introduction






Name	Icon	Function description
Power/! key		Short press ($\leq 1.5S$): video file write protection, icon is displayed on the screen, flashing red lights; Press again, write-protection is canceled, the icon disappears on the screen; Long press ($> 1.5S$): power on/power off;
Video record		Start and stop recording
Photo		Taking photos; In replay mode, return to last level menu
Menu		Enter/exit menu; return to last level menu
Down		Switch to next file
Up		Switch to last file
OK		confirm the settings & enter sub-menu; start/pause the video player

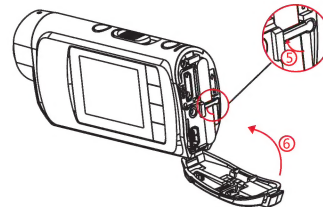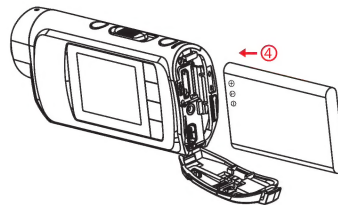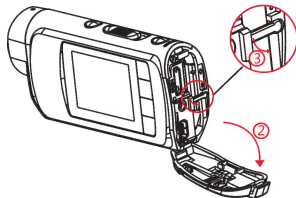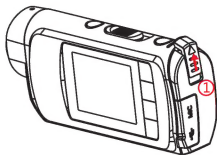


Chapter 3 Battery install

1. Open battery cover ;
2. Slide battery fixing lock ;
3. Insert battery : pay attention to the direction of battery ;
4. Push back the battery fixing lock ;
5. Lock battery cover.



Chapter 4 Charging

1. Power capacity :  Full ;  Middle ;  Low ;  No power ;  No power warning.

2. Access to power adapter/USB cable, device turned on automatically, LCD display provide power to device directly  ; Connect to PC  ; indicates battery charging  . Choose battery charging icon or turn off the camera directly ,Led indicator show red color to start charging. If don't made any operations, the camera will enter battery charge mode automatically.





3. When full charging, indicator is green.

4. It needs 4hours for the 1st time charging.


Note: When the power is exhausted, the machine does not work, can not turn on, press the power button there will be an instant green light.

Chapter 5 Insert memory card


1. Device in turn off mode;
2. Open battery cover of device;
3. Insert Micro SD card(press Micro SD card, memory card will pop-up when take off Mic-SD card from device);
4. Close back side cover.

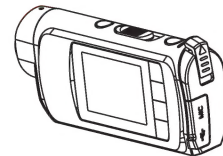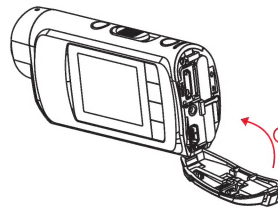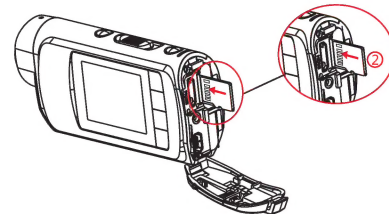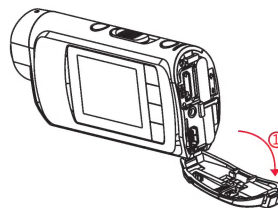

Chapter 6 Mode selection

1. In standby mode, press menu button, then press , the camera mode will switch between "sport mode" and "car mode".
2. In sport mode, videos won't be segmented automatically; In car mode, video will be segmented automatically per minute.

In sport mode,as shown below:

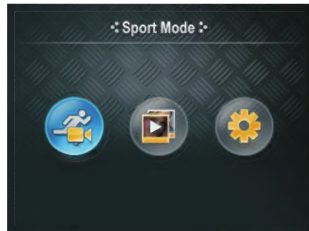

In car mode, as shown below:



Note: When power supply is the internal battery, the machine will automatically shut the screen,in three minutes of without operation.

Chapter 7 Photo shooting and video recording

1. In preview mode, press photo key to take pictures; In video recording mode, you can also press photo key for shootings.
2. In preview mode, push the video key for video recording, as shown below:



3. Preview interface introduction.



From left to right, icons function description

1	Recording mode	Sport ; Car DV
2	Video resolution	1080i 60 ; 1080P 30; 720P 60;
3	Debit rate	High; Middle; Low;

4	Photo resolution	3M; 5M; 8M	
5	T card	T card in device; No T card.	
6	Micphone	Extra micphone connected	
7	Photo mode	Fast;	30 photos continuous shooting with 1.2Mega(1280x920)
		30s	Auto shooting every 30seconds
		2min	Auto shooting every 2minutes
8	Write protection		
9	Battery capacity	Full; Middel ; Low; No power; Warning.	
10	18Min	Available time for recording	

Chapter 8 Playback operation






Press menu key , select replay icon , press  to enter playback mode.

All video/photos displayed, press  /  to select the file to playback, press  for playback, press  for protect/delete; press photo key  to return to last mode;

Chapter 9 Setting operations

1. Press manual key , select correct icon , press  into setting mode list ;


press manual key  to return back

2.  photo setting ;  video setting ;  time setting ;
 language setting ;  microphone setting ;  Formatting.

Chapter 10 Remote controller operation



Use remote controller to take photo/video/ pause.

Remote cotroller design:


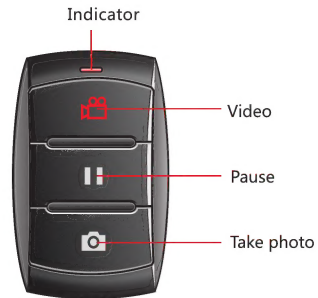


Chapter 11 Mounts application


1. Helmet mount assembling process

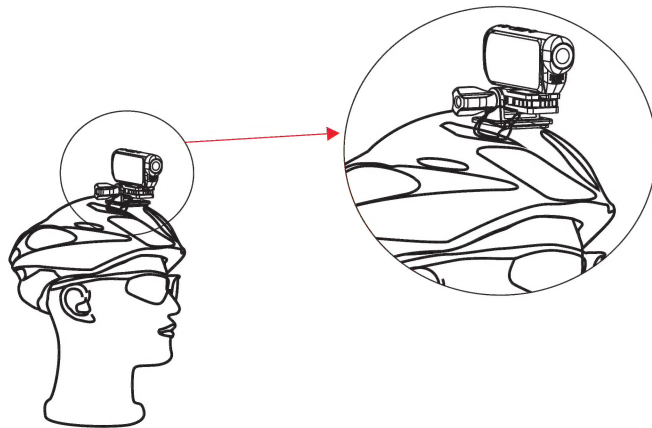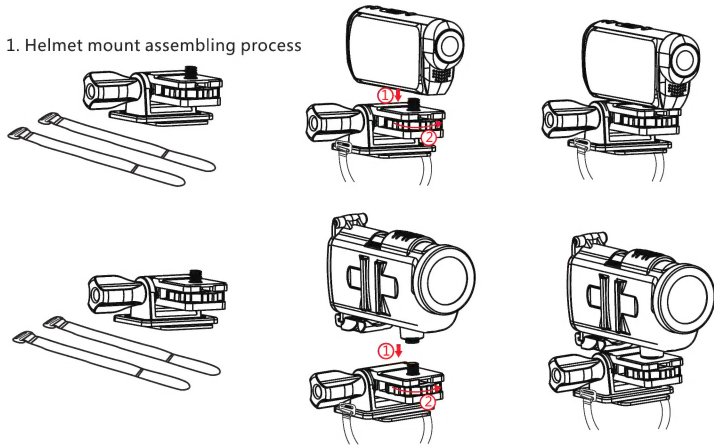


2. Bicycle mount assembling process

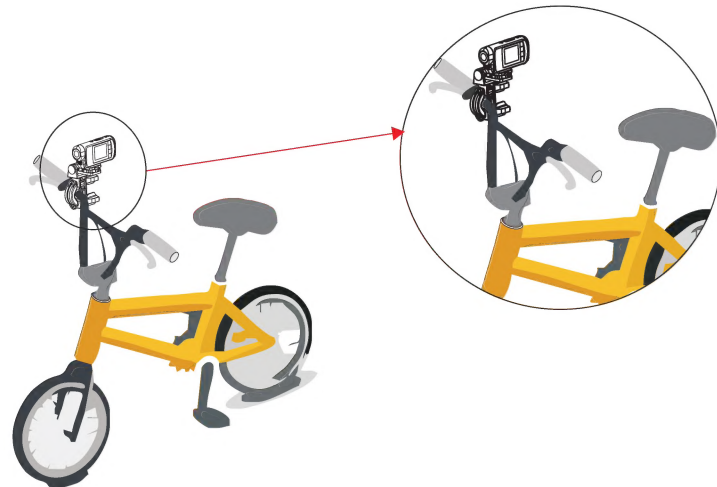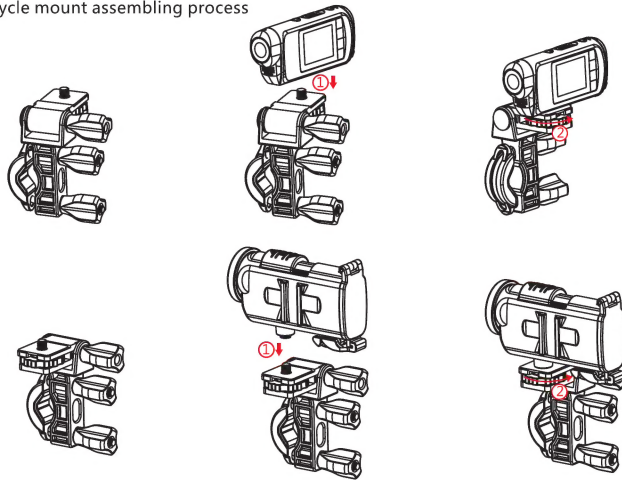

3. Car DVR mount assembling process

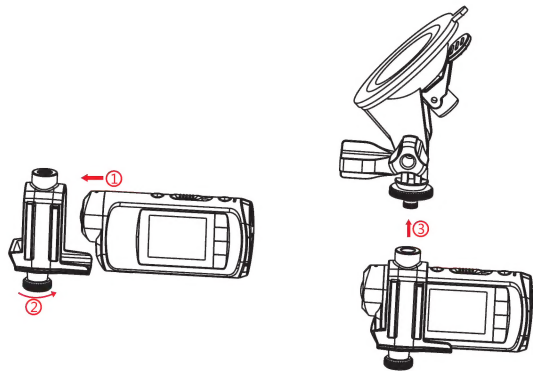


19

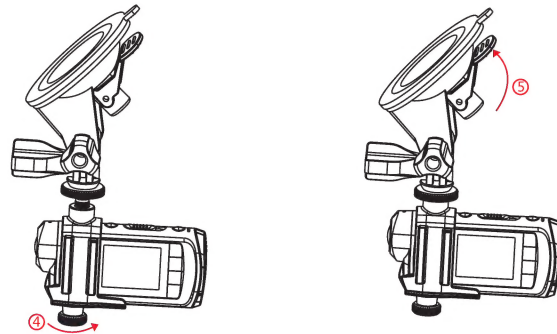

20

4. Water proof case

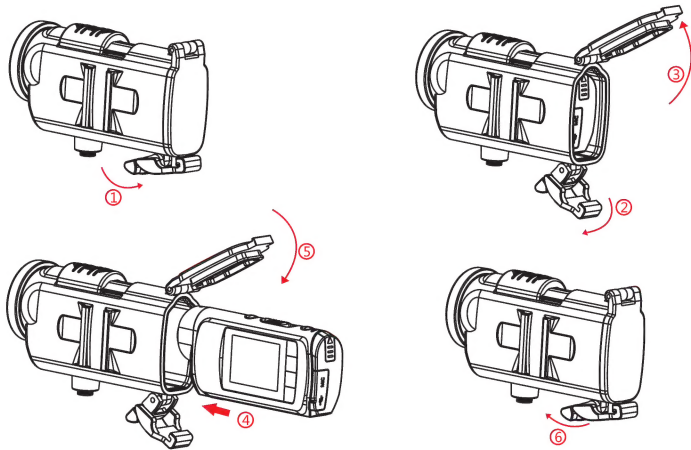

Waterproof House reminders:





- A、 The waterproof house is made of Pmma, can work underwater 30meters.
- B、 Please keep clean of the plastic sealing on back cover of the waterproof house.
- C、 Please ensure the back cover of the housing is closed well to ensure waterproof.
- D、 RAINEX or similiar waterproof agent can be applied for the housing lens, to avoid globs adhered.

Chapter 12 Connect to TV

When connect the device to TV, switch TV mode to HDMI mode, the camera contents can be replayed on TV.

Note: Part of the menu only on the machine screen display, can not be displayed on the TV; some show on TV and the machine screen will be different.

Chapter 13 Connect to PC

Connected to PC, the machine automatically turns on, the screen will be presented with three options, namely: power input , connect to PC , battery charging . Select "  ",press"  " button to confirm.

Chapter 14 Package list

Pls check below accessories when you open the package

S/N	Name	Qty
1	Device	1
2	Battery	1
3	Adapter	1
4	USB cable	1
5	Quick Start Guide	1
6	Mounts	1 (Helmet Mount; Bicycle Mount;Car DVR Suction)

S/N	Name	Function
1	Remote controller	Remote operation of the shooting photo and playback functions
2	HDMI cable	Connect with TV,to play back high definition video/photo through TV
3	MIC cable	Connect with extra mic
4	Waterproof case	Taking photo/video under water
5	Car charger	charging in car

BRAUN Photo Technik GmbH
Klingenhofstrasse 72
90411 Nürnberg
Germany